

Aircraft Manufacture	Aircraft Model	Description	Part Number	ATA	ATA Description
Leonardo	AW139	4G Control Valve	3G3230V00433	32	Landing Gear
Leonardo	AW139	AHARS Tray/Fan Unit	145711-0000	25	Equipment/Furnishings
Leonardo	AW139	Ahrs Panel	144200-0000	34	Navigation
Leonardo	AW139	Air Conditioning Control Box	3G2140V00252	21	Air Conditioning
Leonardo	AW139	Air Conditioning Control Box	3G2140V00253	25	Equipment/Furnishings
Leonardo	AW139	Air Conditioning Control Box	3G2140V00254	25	Equipment/Furnishings
Leonardo	AW139	Air Data Module	HG1153CA03	34	Navigation
Leonardo	AW139	Air Data Module	HG1153CA01	34	Navigation
Leonardo	AW139	Altimentatore Panel	109-0900-10-101	33	Lights
Leonardo	AW139	Ant. Rec. / Transponder Unit	7021450-601	34	Navigation
Leonardo	AW139	Antenna	071-0199-0100	23	Communications
Leonardo	AW139	Antitorque Beam Bolts	3G6330L00452	63	Main Rotor Drive
Leonardo	AW139	Antitorque Beam Bolts	3G6330L00351	63	Main Rotor Drive
Leonardo	AW139	Ap Controller Incomp. System	7027110-904	22	Auto Flight
Leonardo	AW139	Attitude Heading Reference Unit	145130-1002	34	Navigation
Leonardo	AW139	Audio Control Unit	7511900-99001	23	Communications
Leonardo	AW139	Battery Assembly	2013-1A	33	Lights
Leonardo	AW139	Battery Panel	3G290A00433A10R	24	Electrical Power
Leonardo	AW139	Beacon Release Unit	503-21	25	Equipment/Furnishings
Leonardo	AW139	Bearing Support Assy.	3T6510A00443	65	Tail Rotor Drive
Leonardo	AW139	Blower	3G6320V03853	63	Main Rotor Drive
Leonardo	AW139	Cabin Audio Unit	7032691-902	23	Communications
Leonardo	AW139	Cable	3G9B01A37901	91	Helicopter Wiring
Leonardo	AW139	Cable	3G9B11A01412	21	Air Conditioning
Leonardo	AW139	Cable	3G9C11A00311	24	Electrical Power
Leonardo	AW139	Cargo Hook Control Panel	3G2592V00151	25	Equipment/Furnishings
Leonardo	AW139	Cargo Net	3G2550A00231	25	Equipment/Furnishings
Leonardo	AW139	Cdp250	CDP-250G	23	Communications
Leonardo	AW139	Chip Detector Power Module	3G6340V01151	63	Main Rotor Drive
Leonardo	AW139	Chronometer	AT660100	31	Indicating/Recording Systems
Leonardo	AW139	Circuit Breaker	81640	24	Electrical Power
Leonardo	AW139	Circuit Breaker	MS25361-100	24	Electrical Power
Leonardo	AW139	Cockpit Control Panel	3G2150V00353	21	Air Conditioning
Leonardo	AW139	Cockpit Display Unit	3G3130V00151	31	Indicating/Recording Systems
Leonardo	AW139	Cockpit Duct	9713C010000	21	Air Conditioning
Leonardo	AW139	Cockpit Duct	9714C010000	21	Air Conditioning
Leonardo	AW139	Compass Control Panel	3G3420V00251	34	Navigation
Leonardo	AW139	Condensor Assembly	3G2150V01052	21	Air Conditioning
Leonardo	AW139	Cont. Eng. Electronic	822835-5-107	25	Equipment/Furnishings
Leonardo	AW139	Contractor	1152620-3	24	Electrical Power
Leonardo	AW139	Control Panel	3G2591V02351	25	Equipment/Furnishings
Leonardo	AW139	Control Panel	727-0168/11	28	Fuel
Leonardo	AW139	Controller	715-40-00010	34	Navigation
Leonardo	AW139	Coupler Unit	DGSC20-02	34	Navigation
Leonardo	AW139	Coupler Unit	DMB20-20	34	Navigation
Leonardo	AW139	Coupler Unit	DRC20-04	34	Navigation
Leonardo	AW139	Cover	3G2510A04731	25	Equipment/Furnishings
Leonardo	AW139	Cover	3G2510A05131	25	Equipment/Furnishings
Leonardo	AW139	Cover	3G5315A23532	53	Fuselage
Leonardo	AW139	Cover	3G5315A29351	25	Equipment/Furnishings
Leonardo	AW139	Cover	3G5315A49931	25	Equipment/Furnishings
Leonardo	AW139	Cover	3G5315A60431	24	Electrical Power
Leonardo	AW139	Cover	3G5320A03333A1	53	Fuselage
Leonardo	AW139	Cpi Cockpit Control Panel	503-22-5	25	Equipment/Furnishings
Leonardo	AW139	Cpi Release Unit	503-21	25	Equipment/Furnishings
Leonardo	AW139	Cpi System Interface Unit	503-24-6-A	25	Equipment/Furnishings
Leonardo	AW139	Cpi Water Activated Switch	503-23-2	25	Equipment/Furnishings
Leonardo	AW139	Crash Position Indicator	503-16	25	Equipment/Furnishings
Leonardo	AW139	Cursor Control Incomp.. System	7026883-902	31	Indicating/Recording Systems
Leonardo	AW139	Dc Current Shunt	1152560-1	24	Electrical Power
Leonardo	AW139	Dc Generator Control Unit	1152550-4	24	Electrical Power
Leonardo	AW139	Dc Generator Control Unit	3001-01-100-4	31	Indicating/Recording Systems
Leonardo	AW139	Dimming System	3G3320V00355	33	Lights

Leonardo	AW139	Diode Module	3G2430V00352	24	Electrical Power
Leonardo	AW139	Diode Module	3G2430V00353	24	Electrical Power
Leonardo	AW139	Display Controller	7016683-966	34	Navigation
Leonardo	AW139	Display Dimming Control Panel	3G4630V00153	31	Indicating/Recording Systems
Leonardo	AW139	Display Rec. Control Panel	3G4630V00351	31	Indicating/Recording Systems
Leonardo	AW139	Display Unit	7025725-941	34	Navigation
Leonardo	AW139	Display Unit	7037620-814	31	Indicating/Recording Systems
Leonardo	AW139	Egpws	965-1595-026	34	Navigation
Leonardo	AW139	Electric Motor Drive Pump	3G2920V00131	29	Hydraulic Power
Leonardo	AW139	Emergency Exit Light Batt Pac	8162-2	33	Lights
Leonardo	AW139	Emergency Float Control	3G9560V00558	95	Crew Escape and Safety
Leonardo	AW139	Emergency Psu	8E5-455-070-00	33	Lights
Leonardo	AW139	Engine Control Panel	727-0344/02	76	Engine Controls
Leonardo	AW139	Engine Relay Box	3G7610V00331	76	Engine Controls
Leonardo	AW139	Engine Relay Box	3G7610V00332	25	Equipment/Furnishings
Leonardo	AW139	Evaporator	3G2150V00653	21	Air Conditioning
Leonardo	AW139	Evaporator	3G2150V00755	21	Air Conditioning
Leonardo	AW139	Evaporator	3G2150V00855	21	Air Conditioning
Leonardo	AW139	Exciter	3043937-05	71	Engine Controls
Leonardo	AW139	Exhaust	3G7800L00431	78	Exhaust
Leonardo	AW139	Exhaust	3G7800L00531	78	Exhaust
Leonardo	AW139	Exhaust Duct	3G7800L00134	78	Exhaust
Leonardo	AW139	Exhaust Stack	3G7800L00234	78	Exhaust
Leonardo	AW139	Exhaust Stack	3G7800L00632	71	Powerplant
Leonardo	AW139	Exhaust Stack	3G7800L00732	71	Powerplant
Leonardo	AW139	Fairing	3G5355A00836B	53	Fuselage
Leonardo	AW139	Fairing	3G5355A00936	53	Fuselage
Leonardo	AW139	Fan Mgb Cooling	3G6320V03853	63	Main Rotor Drive
Leonardo	AW139	Filter Drier Receiver	20204-061	21	Air Conditioning
Leonardo	AW139	Fin Assembly	3G5351A00134	53	Fuselage
Leonardo	AW139	Fire Detector Control Panel	3G2600V00251	26	Fire Protection
Leonardo	AW139	Fire Extinguisher Bottle	3G2620V00131	26	Fire Protection
Leonardo	AW139	Fire Extinguisher Bottle	3G2620V00132	26	Fire Protection
Leonardo	AW139	Fire Extinguisher Cont	3G2620V00131	26	Fire Protection
Leonardo	AW139	Fire Extinguisher Cont	3G2620V00131	26	Fire Protection
Leonardo	AW139	Flexible Coupling	3T6510V00152	65	Tail Rotor Drive
Leonardo	AW139	Flight Guidance Control	7011702-948	22	Auto Flight
Leonardo	AW139	Flight Recorder Control Unit	D51616-102	31	Indicating/Recording Systems
Leonardo	AW139	Float Bottle	45521003	95	Crew Escape and Safety
Leonardo	AW139	Float Bottle	3G9560V01052	95	Crew Escape and Safety
Leonardo	AW139	Float Switch	3G9560V01151	95	Crew Escape and Safety
Leonardo	AW139	Fuel Control Unit	3G2840V00852	28	Fuel
Leonardo	AW139	Fuel Manifold	3G2820V00731	28	Fuel
Leonardo	AW139	Hanger Bearing	3T6510A00444	65	Tail Rotor Drive
Leonardo	AW139	Hoist Control Panel	3G2591V00153	25	Equipment/Furnishings
Leonardo	AW139	Hydraulic Servo	3G6730V00531	67	Flight Controls
Leonardo	AW139	Hydraulic Servo	3G6730V00532	67	Flight Controls
Leonardo	AW139	Hydraulic System Control Panel	3G2900V00751	29	Hydraulic Power
Leonardo	AW139	Input Drive Shaft	3G6310V00152	63	Main Rotor Drive
Leonardo	AW139	Intermediate Gearbox	3T6521A00149	65	Tail Rotor Drive
Leonardo	AW139	Kcm805 Configuration Mod	071-00112-0200	34	Navigation
Leonardo	AW139	Kta910	066-01177-0101	34	Navigation
Leonardo	AW139	L/H Main Landing Gear	3G3210V00137	32	Landing Gear
Leonardo	AW139	L/H Mlg Trailing Arm	1656A1100-01	32	Landing Gear
Leonardo	AW139	Landing Gear Control Panel	3G3230V00633	32	Landing Gear
Leonardo	AW139	Led Emergency Dome Light	2LA455115-26	33	Lights
Leonardo	AW139	Lh Aft Float Assembly	3G9560V00332	95	Crew Escape and Safety
Leonardo	AW139	Lh Cover	3G2510A04131	25	Equipment/Furnishings
Leonardo	AW139	Lh Fwd Float Assembly	3G9560V00131	95	Crew Escape and Safety
Leonardo	AW139	Lh Pilot Footboard	3G5331A01531	53	Fuselage
Leonardo	AW139	Light Control Panel	3G3320V00453	33	Lights
Leonardo	AW139	Line	14359A010001	21	Air Conditioning
Leonardo	AW139	Linear Actuator	1-8486-3	22	Auto Flight
Leonardo	AW139	Linear Actuator	8486-3	22	Auto Flight

Leonardo	AW139	Load Indicator	V-1240-9-1	25	Equipment/Furnishings
Leonardo	AW139	Locking Ring Outer	3G6230A03152	62	Main Rotor
Leonardo	AW139	Lower Scissors Lever	3G6230A00932	62	Main Rotor
Leonardo	AW139	Lubricating Pump	3G6320V04252	63	Main Rotor Drive
Leonardo	AW139	M/R Damper Bolt	3G6220A01252	62	Main Rotor
Leonardo	AW139	M/R Elastomeric Bearing	3G6220V00154	62	Main Rotor
Leonardo	AW139	M/R Elastomeric Bearing	3G6220V00153	62	Main Rotor
Leonardo	AW139	M/R Lag Damper	3G6220V01353	62	Main Rotor
Leonardo	AW139	M/R Rotating Swashplate	3G6230A00332	62	Main Rotor
Leonardo	AW139	M/R Scissors Attach Fitting	3G6220A00632	62	Main Rotor
Leonardo	AW139	Main Gearbox Assy.	3G6320A00134	63	Main Rotor Drive
Leonardo	AW139	Main Retracting Actuator L/H	3G3230V00234	32	Landing Gear
Leonardo	AW139	Main Retracting Actuator R/H	3G3230V00332	32	Landing Gear
Leonardo	AW139	Main Rotor Blade	3G6210A00131	62	Main Rotor
Leonardo	AW139	Main Rotor Hub Assy.	3G6220A00332	62	Main Rotor
Leonardo	AW139	Main Wheel Assembly	3G3240V00231	32	Landing Gear
Leonardo	AW139	Master Caution Warning	3G3150V00453	31	Indicating/Recording Systems
Leonardo	AW139	Master Cylinder	3G3230A00731	32	Landing Gear
Leonardo	AW139	Master Cylinder	3G3240V00433	32	Landing Gear
Leonardo	AW139	Misc. System Control Panel	3G3110V00354	31	Indicating/Recording Systems
Leonardo	AW139	Mlg Actuator Bolt Sponson	3G3210L00151	32	Landing Gear
Leonardo	AW139	Mlg L/H Segment	3P5339A00333	53	Fuselage
Leonardo	AW139	Mlg R/H Segment	3P5339A00433	53	Fuselage
Leonardo	AW139	Mlg Retraction Actuator	3G3230V00334	32	Landing Gear
Leonardo	AW139	Mlg Shock Absorber	3G3210V00333	32	Landing Gear
Leonardo	AW139	Mlg Shock Absorber	3G3210V00237	32	Landing Gear
Leonardo	AW139	Mlg Shock Absorber L/H	3G3210V00333	32	Landing Gear
Leonardo	AW139	Mlg Shock Absorber R/H	3G3210V00333	32	Landing Gear
Leonardo	AW139	Modular Avionics Unit	3G4600A00134	31	Indicating/Recording Systems
Leonardo	AW139	Modular Avionics Unit	7031629-1950	31	Indicating/Recording Systems
Leonardo	AW139	Modular Radio Cabinet #1	3G4600A00133	31	Indicating/Recording Systems
Leonardo	AW139	Module	3G2900V00651	29	Hydraulic Power
Leonardo	AW139	Motor Converter	3G3040V00352Q	30	Ice and Rain Protection
Leonardo	AW139	Mr Blade Sock Pole	3G1005G01732	25	Equipment/Furnishings
Leonardo	AW139	Mrc	7517959-904	23	Communications
Leonardo	AW139	Nlg Retraction Actuator	3G3230V00132	32	Landing Gear
Leonardo	AW139	Nose Landing Gear	3G3220V00135	32	Landing Gear
Leonardo	AW139	Nose Retracting Actuator	3G3230V00132	32	Landing Gear
Leonardo	AW139	Oil Cooler	3G6320V03652	63	Main Rotor Drive
Leonardo	AW139	Panel	3G1130L00155	11	Placards and Markings
Leonardo	AW139	Panel	3G2506P04651	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A00731	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A08931	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A09231	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A21559	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A21563A1	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A22050	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A22054	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G2580A22058	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G3550V00251	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G5306P22711-501A18	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G5306P6723	25	Equipment/Furnishings
Leonardo	AW139	Panel	3G5315A26131	53	Fuselage
Leonardo	AW139	Panel	3G5320A06231	25	Equipment/Furnishings
Leonardo	AW139	Panel	3P5340A03531	25	Equipment/Furnishings
Leonardo	AW139	Panel	3P5340A03731	25	Equipment/Furnishings
Leonardo	AW139	Panel	3T6510A00553	25	Equipment/Furnishings
Leonardo	AW139	Panel	727-0856/01.01	25	Equipment/Furnishings
Leonardo	AW139	Panel	727-0880/01	33	Lights
Leonardo	AW139	Panel, Hoist	3G2306P00931A4	25	Equipment/Furnishings
Leonardo	AW139	Passenger Speaker Amplifier	251-002	23	Communications
Leonardo	AW139	Pitot Heat Monitor	E37040D	30	Ice and Rain Protection
Leonardo	AW139	Plt Master Caution Warning Panel	3G3150V00353	31	Indicating/Recording Systems
Leonardo	AW139	Polycon Transceiver/Receiver	0004RL1-00U	23	Communications

Leonardo	AW139	Power Control Module	3G2900V00652	29	Hydraulic Power
Leonardo	AW139	Power Distribution Panel #2	3G2430V00651	24	Electrical Power
Leonardo	AW139	Power Supply	30001-01-000	24	Electrical Power
Leonardo	AW139	Power Supply	RPS-77E	25	Equipment/Furnishings
Leonardo	AW139	R/H Main Landing Gear	3G3210V00237	32	Landing Gear
Leonardo	AW139	R/H Mlg Trailing Arm	1656A2000-02	32	Landing Gear
Leonardo	AW139	Radio Altimeter R/T	7001840-934	34	Navigation
Leonardo	AW139	Rear Fuselage	3P5300A00132	53	Fuselage
Leonardo	AW139	Recirculation Duct	BWT23597-3	21	Air Conditioning
Leonardo	AW139	Relay (200 Amp)	MA24183-D1	24	Electrical Power
Leonardo	AW139	Remote Instrument Panel	7016954-910	31	Indicating/Recording Systems
Leonardo	AW139	Rh Aft Float Assembly	3G9560V00432	95	Crew Escape and Safety
Leonardo	AW139	Rh Cover	202010A	25	Equipment/Furnishings
Leonardo	AW139	Rh Fwd Float Assembly	3G9560V00231	95	Crew Escape and Safety
Leonardo	AW139	Rod End (Fin End)	3G5510A03931	55	Stabilizers
Leonardo	AW139	Rod End (Tailplane End)	3G5510A04053	55	Stabilizers
Leonardo	AW139	Rod Sleeve	3G5510A04152	55	Stabilizers
Leonardo	AW139	Rotor Brake Actuator	3G6352V02451	63	Main Rotor Drive
Leonardo	AW139	Rotor Brake Panel	3G6352A11732	63	Main Rotor Drive
Leonardo	AW139	Rotor Brake Relay Box	3G6353V00252	63	Main Rotor Drive
Leonardo	AW139	Shut Off Valve	3G6352V01451	63	Main Rotor Drive
Leonardo	AW139	Shut Off Valve	3G6352V01452	63	Main Rotor Drive
Leonardo	AW139	Sirio Panel	109-0900-10-101	33	Lights
Leonardo	AW139	Skytrac Panel	DVI-250	23	Communications
Leonardo	AW139	Smoke Detector	8930-112B90H101	26	Fire Protection
Leonardo	AW139	Starter Generator	1152546-2	24	Electrical Power
Leonardo	AW139	Sys. Interface Battery Elt	3G2510V00751	25	Equipment/Furnishings
Leonardo	AW139	System Interface Unit	503-24-6-A	25	Equipment/Furnishings
Leonardo	AW139	System Interface Unit Battery	A01011	23	Communications
Leonardo	AW139	T/R Blade	3G6410A00133	64	Tail Rotor
Leonardo	AW139	T/R Blade Bolt	3G6420A00252	64	Tail Rotor
Leonardo	AW139	T/R Blade Damp Bracket	3G6420A00832	64	Tail Rotor
Leonardo	AW139	T/R Drive Coupling	3T6510V00152	65	Tail Rotor Drive
Leonardo	AW139	T/R Elastomeric Bearing	3G6420V00153	64	Tail Rotor
Leonardo	AW139	T/R Elastomeric Damper	3G6420V00455	64	Tail Rotor
Leonardo	AW139	T/R Gearbox Assy.	3T6522A00243	65	Tail Rotor Drive
Leonardo	AW139	T/R Gearbox Fitting	3G5351A01151	65	Tail Rotor Drive
Leonardo	AW139	T/R Hub Assy.	3G6420A00332	64	Tail Rotor
Leonardo	AW139	T/R Servo	3G6730V00731	67	Flight Controls
Leonardo	AW139	T/R Servo	3G6730V00731	67	Flight Controls
Leonardo	AW139	Tail Assembly	3G5350A00133A	53	Fuselage
Leonardo	AW139	Tailplane Assy.	3G5510A05431	55	Stabilizers
Leonardo	AW139	Tailplane Lower Fitting	3G5351A07531	53	Fuselage
Leonardo	AW139	Tailplane Upper L/H Fitting	3G5351A01633A	53	Fuselage
Leonardo	AW139	Tailplane Upper R/H Fitting	3G5351A01532	53	Fuselage
Leonardo	AW139	Tcas Blindmate Antenna Sys	OE5669-139	34	Navigation
Leonardo	AW139	Test Control Panel	3G3300V00251	31	Indicating/Recording Systems
Leonardo	AW139	Tire Assenbly	5014171	32	Landing Gear
Leonardo	AW139	Tire Assenbly	5014172	32	Landing Gear
Leonardo	AW139	Torque Tube Assembly	3G6310A00553	63	Main Rotor Drive
Leonardo	AW139	Torque Tube Assembly	3G6320A15531	63	Main Rotor Drive
Leonardo	AW139	Tr Shaft Drive Assy.	3T6510A00144	65	Tail Rotor Drive
Leonardo	AW139	Tr Shaft Drive Assy.	3T6510A00241	65	Tail Rotor Drive
Leonardo	AW139	Tr Shaft Drive Assy.	3T6510A00339	65	Tail Rotor Drive
Leonardo	AW139	Transformer Dc Current	3G9C11B00311	91	Helicopter Wiring
Leonardo	AW139	Tube Assembly	3E6712A01533	67	Flight Controls
Leonardo	AW139	Tube Assembly	3E6722A00334	67	Flight Controls
Leonardo	AW139	Upper Scissor Lever Assy	3G6230A00832	62	Main Rotor
Leonardo	AW139	V/Uhf Direction Finder	935-2	34	Navigation
Leonardo	AW139	Vhf Fm Transceiver	NPX138N-500	23	Communications
Leonardo	AW139	Weather Radar Controller	7008471-688	34	Navigation
Leonardo	AW139	Window	3G5211A00831	56	Windows
Leonardo	AW139	Window	3G5610A00831	56	Windows
Leonardo	AW139	Windshield	3G2900V00551	56	Windows

Leonardo	AW139	Windshield	3G5610V00651	56	Windows
Leonardo	AW139	Windshield Wiping Control Panel	3G3040V00251	30	Ice and Rain Protection
Sikorsky	S76	Act Piston Rod	1944E204	32	Landing Gear
Sikorsky	S76	Act Piston Terminal	2070-212	32	Landing Gear
Sikorsky	S76	Afcs Actuator -Fwd Roll	76900-01802-106	67	Flight Controls
Sikorsky	S76	Aft Eng Strut	0401277930	71	Powerplant
Sikorsky	S76	Aircraft Battery	019500-000	24	Electrical Power
Sikorsky	S76	Axle	2070-85	32	Landing Gear
Sikorsky	S76	Axle	2071-85	32	Landing Gear
Sikorsky	S76	Axle Support Fitting	2071-12	32	Landing Gear
Sikorsky	S76	Barrier Face Filter	76302-07800-104	75	Air
Sikorsky	S76	Barrier Main Filter	76302-07800-103	75	Air
Sikorsky	S76	Bearing Outer Race	SB5206-202	65	Rotors
Sikorsky	S76	Bifilar Assy	76107-08001-043	65	Rotors
Sikorsky	S76	Bifilar Support Arm Lower	76107-08001-045	65	Rotors
Sikorsky	S76	Bifilar Weights Lower (4)	76107-08004-057	65	Rotors
Sikorsky	S76	Blade Bond Assy A	76101-05020-048	65	Rotors
Sikorsky	S76	Cylinder	2070-2	32	Landing Gear
Sikorsky	S76	Drag Brace Act Cyl Term	2070-201	32	Landing Gear
Sikorsky	S76	Drag Brace Rod End	2071-35	32	Landing Gear
Sikorsky	S76	Drag Strut	0401277090	71	Powerplant
Sikorsky	S76	Elastomeric Attach Bolts	NAS-626-H9	65	Rotors
Sikorsky	S76	Elastomeric Attach Bolts	NAS-626-33	65	Rotors
Sikorsky	S76	Emergency Power Supply	501-1228-04	33	Lights
Sikorsky	S76	Engine Fire Bottle	76306-07901-101	26	Fire Protection
Sikorsky	S76	Fire Ext Cartridge	897776-01	26	Fire Protection
Sikorsky	S76	Float Bag L/H Main	76251-01102-109	32	Landing Gear
Sikorsky	S76	Float Bag L/H Nose	76251-01101-104	32	Landing Gear
Sikorsky	S76	Float Bag R/H Main	76251-01102-110	32	Landing Gear
Sikorsky	S76	Float Bag R/H Nose	D24677-104	32	Landing Gear
Sikorsky	S76	Float Bottle	B13269-1	32	Landing Gear
Sikorsky	S76	Fork	2070-60	32	Landing Gear
Sikorsky	S76	Fuel Selector Valve, L/H	65317-03006-109	28	Fuel
Sikorsky	S76	Fuel Selector Valve, R/H	65317-03006-110	28	Fuel
Sikorsky	S76	Horn	76102-08011-046	65	Rotors
Sikorsky	S76	Horn Assy A	76101-05006-042	65	Rotors
Sikorsky	S76	Horn Assy B	76101-05006-042	65	Rotors
Sikorsky	S76	Hyd Pump	76550-09808-102	29	Hydraulic Power
Sikorsky	S76	Intermediate Gear Box	76357-05600-041	66	Powertrain
Sikorsky	S76	L/G Blowdown Bottle	23111353-1	32	Landing Gear
Sikorsky	S76	L/H Inboard Engine Mount	0401277070	71	Powerplant
Sikorsky	S76	L/H Main Gear Cylinder	2071-2	32	Landing Gear
Sikorsky	S76	L/H Main L/G Actuator	1945G200-01	32	Landing Gear
Sikorsky	S76	L/H Main L/G Strut Assy	76250-02500-101	32	Landing Gear
Sikorsky	S76	L/H Tripod	0401277050	71	Powerplant
Sikorsky	S76	Lower Drag Brace	2071-74	32	Landing Gear
Sikorsky	S76	Lower Torque Arm	2071-47	32	Landing Gear
Sikorsky	S76	M/G/B Quill Shaft	76351-09628-101	66	Powertrain
Sikorsky	S76	M/G/B Spline Adapter Shaft	76351-09626-104	66	Powertrain
Sikorsky	S76	M/L/G Door Sep Link	76251-00702-043	32	Landing Gear
Sikorsky	S76	M/R Servo	76650-09805-111	67	Flight Controls
Sikorsky	S76	Main Gear Box Assy	76351-09600-044	66	Powertrain
Sikorsky	S76	Main Rotor Blade	76150-09100-051A	65	Rotors
Sikorsky	S76	Main Rotor Blade	76150-09100-041	65	Rotors
Sikorsky	S76	Main Rotor Blade	76150-09100-043A	65	Rotors
Sikorsky	S76	Main Rotor Blade	76150-09100-048A	65	Rotors
Sikorsky	S76	Main Rotor Hub Assy	76103-08010-049	65	Rotors
Sikorsky	S76	Main Rotor Shaft	76351-09630-041	66	Powertrain
Sikorsky	S76	Main Rotor Shaft	76351-09630-041	66	Powertrain
Sikorsky	S76	Main Wheel	40-412	32	Landing Gear
Sikorsky	S76	Mgb Support Fitting, L/H	76209-03001-051	66	Powertrain
Sikorsky	S76	Mgb Support Fitting, R/H	76209-03001-052	66	Powertrain
Sikorsky	S76	Nose L/G Actuator	2070A200	32	Landing Gear
Sikorsky	S76	Nose Landing Gear	76250-01000-111	32	Landing Gear

Sikorsky	S76	Nose Wheel	5007553	32	Landing Gear
Sikorsky	S76	Outer Cylinder	1945F302	32	Landing Gear
Sikorsky	S76	Output Flange	76358-05118-047	66	Powertrain
Sikorsky	S76	Output Shaft	76358-05124-042	66	Powertrain
Sikorsky	S76	Pin Universal To Cyl	2071-29	32	Landing Gear
Sikorsky	S76	Pin, Pos Rod Up Torque Arm	2071-32	32	Landing Gear
Sikorsky	S76	Pinger Battery Cvr	DK120	31	Indicating/Recording Systems
Sikorsky	S76	Piston	2070-4	32	Landing Gear
Sikorsky	S76	Piston	1945E314	32	Landing Gear
Sikorsky	S76	Piston	2071-4	32	Landing Gear
Sikorsky	S76	Portable Fire Ext Cockpit	898052	26	Fire Protection
Sikorsky	S76	Power Supply	60-3274-5	33	Lights
Sikorsky	S76	R/H Inboard Engine Mount	0401277080	71	Powerplant
Sikorsky	S76	R/H Main L/G Actuator	1945G200-02	32	Landing Gear
Sikorsky	S76	R/H Main L/G Strut Assy	76250-02500-102	32	Landing Gear
Sikorsky	S76	R/H Tripod	0401277060	71	Powerplant
Sikorsky	S76	Retraction Brace	2071-76-11	32	Landing Gear
Sikorsky	S76	Retraction Brace	2071-76-12	32	Landing Gear
Sikorsky	S76	Rod End	01-747-061	32	Landing Gear
Sikorsky	S76	Rod End Postioning Rod	2071-235	32	Landing Gear
Sikorsky	S76	Servo Input Control Rod	76400-00034-056	67	Flight Controls
Sikorsky	S76	Servo Input Control Rod	76400-00034-059	67	Flight Controls
Sikorsky	S76	Spar	76101-05017-045	65	Rotors
Sikorsky	S76	Spindle	76102-08001-045	65	Rotors
Sikorsky	S76	Spindle / Cuff Assy	76102-08000-061	65	Rotors
Sikorsky	S76	Spindle Assy	76102-08001-045	65	Rotors
Sikorsky	S76	Spindle Nut	76102-08003-103	65	Rotors
Sikorsky	S76	Squib	2978-9001-2	32	Landing Gear
Sikorsky	S76	Stabilizer	76080-20063-057	55	Stabilizers
Sikorsky	S76	Stabilizer Retaining Fitting	76209-04004-042	55	Stabilizers
Sikorsky	S76	Stabilizer Support Fitting	76209-24004-041	55	Stabilizers
Sikorsky	S76	Starter Generator #2	200SGL115Q	24	Electrical Power
Sikorsky	S76	Starter Generator#1	200SGL144Q	24	Electrical Power
Sikorsky	S76	Swashplate Assy	76104-08500-041	65	Rotors
Sikorsky	S76	Swashplate Guide	76351-09029-102	66	Powertrain
Sikorsky	S76	T/R Drive Brg Support	76361-04007-042	66	Powertrain
Sikorsky	S76	T/R Outboard Retaining Plate	76102-05001-047	65	Rotors
Sikorsky	S76	T/R Servo	76650-05803-102	67	Flight Controls
Sikorsky	S76	Tail Cone Upper Angle	76202-04001-107	53	Fuselage
Sikorsky	S76	Tail Cone Upper Angle	76202-04001-108	53	Fuselage
Sikorsky	S76	Tail Cone Upper Longeron	76202-04001-146	53	Fuselage
Sikorsky	S76	Tail Cone Upper Longeron	76202-04001-147	53	Fuselage
Sikorsky	S76	Tail Rotor Blade Assy	76101-05501-042	66	Powertrain
Sikorsky	S76	Tail Rotor Gear Box Assy	76358-05600-042	66	Powertrain
Sikorsky	S76	Tip Cap	76150-09043-054	65	Rotors
Sikorsky	S76	Tip Cap	76150-09143-050	65	Rotors
Sikorsky	S76	Upper Housing	76351-09002-055	66	Powertrain
Sikorsky	S76	Upper Torque Arm	2071-46	32	Landing Gear
Sikorsky	S76	Utility Hoist	42325-12-4	25	Equipment/Furnishings
Sikorsky	S76	Voice Recorder	D51521-010-112	31	Indicating/Recording Systems